


ZRIP User Manual


- Create Spot Color




1. Import the image into Photoshop and use the checkbox tool to select the area where you want to print white ink.

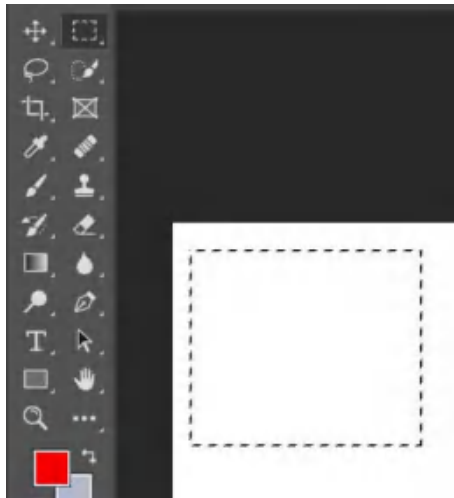


2. Select a channel, then click Expand on the right - Create New Spot Color Channel.

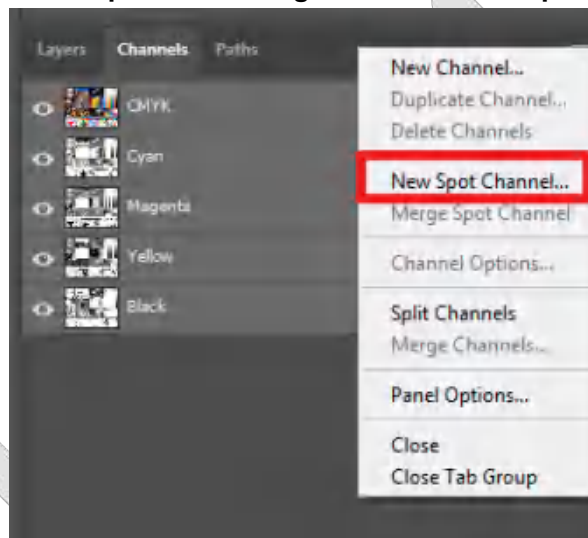

3. Establish a new spot color channel (color and density data do not affect the actual printed white ink thickness).

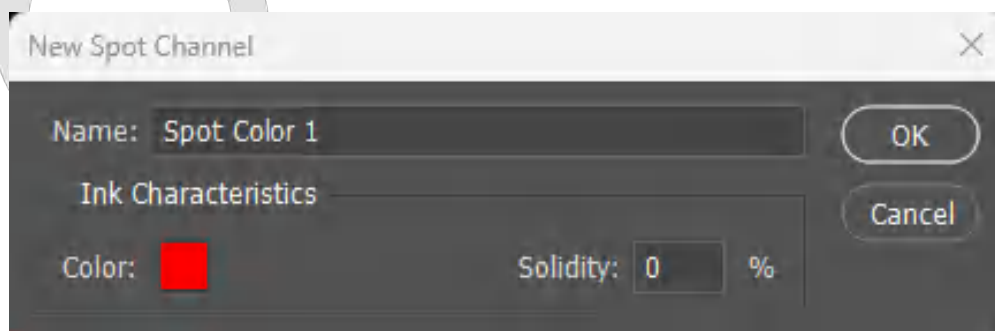


4. Press the F8 key or open the window - Information, open the info bar, where the K value represents the thickness of the white ink, K The higher the value, the thicker the white ink; K:100 indicates 100% white ink thickness.

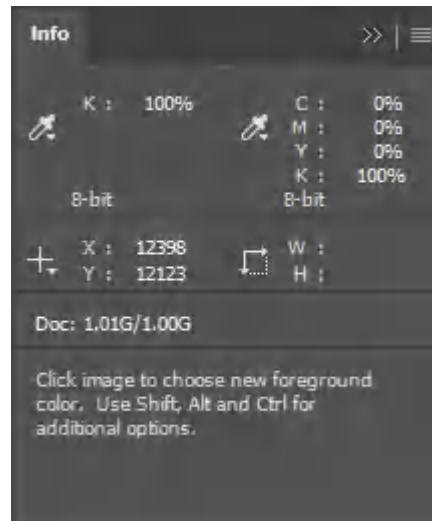

5. When you need to change the white ink thickness, use the front color/background color to fill the spot color channel for the change.

After changing the CMYK value of the front color/background color, use the shortcut Ctrl/Alt+Delete to fill the spot color channel. After filling, use the info bar to reconfirm the thickness of the filled white ink.

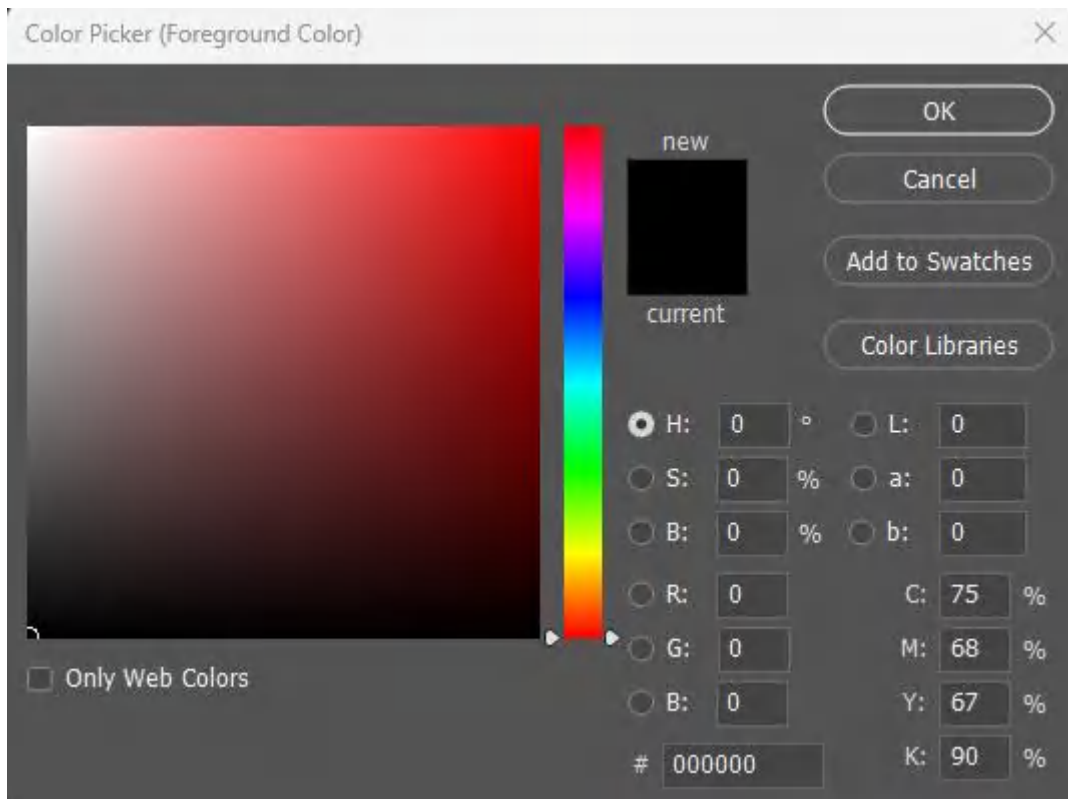

6.