

obziy | DTF Oven

Quick Use Guide



Obziy Auto Shake1 DTF Oven

Installation at a Glance

	 Before Installation	 Installation (All in about 28 min)	 After Installation
 Auto Shake1 DTF Oven	1. Discover Your Machine 2. Unboxing Checklist	1. Power Cord Installation 2. Powering Up and Starting	1. Pre-heat 2. Film Placement 3. Curing

DTF Oven Setup | Before Installation

■ Discover Your machine



Auto Shake1 DTF Oven Setup | Before Installation



a. TEMPERATURE - Temperature Display: To display set temperature while setting and current temperature while curing

b. TIME - Time Display: To display set time while setting and left time while curing

c. TEMP - Temperature setting: To set temperature, press TEMP then press up or down button

d. TIME - Time Seeting: To set curing time, press "TIME" then press up or down button

e. OUT Indicator: Means the oven is in heating

f. TIME Indicator: Means the countdown is in progress

g. SV indicator: Shows set temperature state

h. ST indicator: Present the countdown process.

i. °C/°F indicator: Shows the current temperature unit

j. AT indicator

k. AL indicator

Auto Shake1 DTF Oven Setup | Unboxing checklist

Oven
1Cable
1

DTF Oven Setup | Installation

2 steps | All in about 1 minute



■ Power Cord Installation



1.
Oven Placement: Place the machine on a stable, flat, and well-ventilated workbench.
2.
Power Cord Connection: Simply connect the power cord

DTF Oven Setup | Post-Installation

3 simple steps

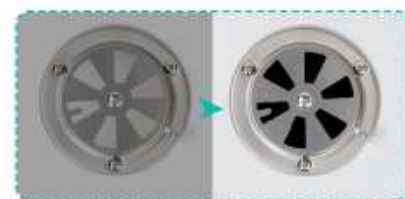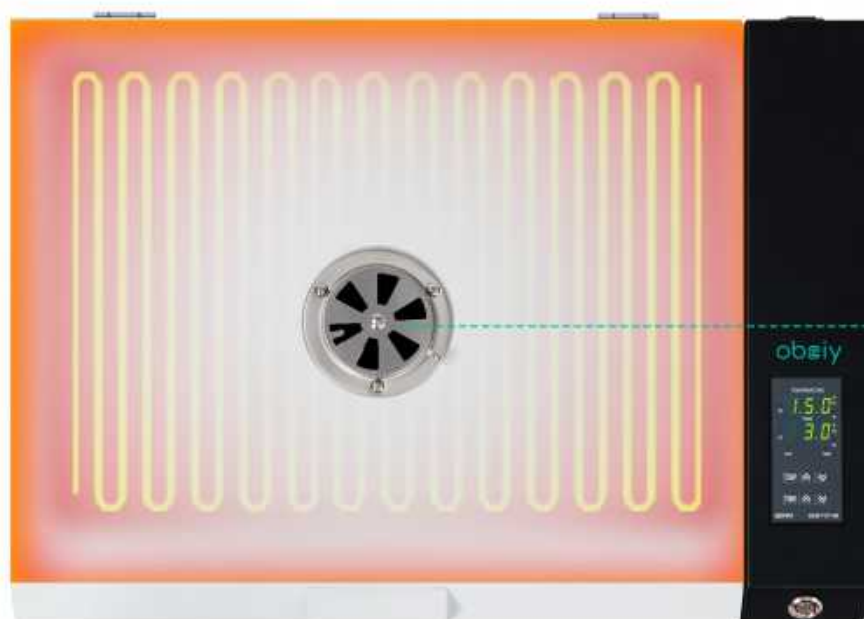

1.

Pre-heat: Set the temperature and time.

Then KEEP the upper cover OPEN and wait for pre-heating process



2.

Film Placement: Place the film POWDER SIDE UP.

DTF Oven Setup | Installation

2 steps | All in about 1 minutes

■ Powering Up and Starting



Turn on the red power button on the side to power on the machine.



Turn on the power button to turn on the machine

Auto Shake1 DTF Oven Setup | Installation

4 simple steps | All in about 10 minutes

■ Film Take-up Roller Installation



3.
Curing: Close the cover and wait for powder curing process.

Specifications

Product Dimension (Inches)	21.65*15.39*4.92
Baking Tray size(Inches)	16.73*13.54
Package Dimension (Inches)	23.9*17.3*6.4
Temperature Range	0-302°F/0°C-150°C
Highest Surface Temperature	302°F/150°C
Heating Time	5m50s to 305°F
Digital PID Temperature Control Accuracy	1 °F/1 °C
Operating Power Consumption	Max: 930W
Voltage	110-220V 50-60Hz
Net Weight (lbs)	23.2
Gross Weight (lbs)	26.5
Unboxing Checklist	110V Cable*1
Clearance on all sides	11.8inch



More Information

 <https://www.obziy.com/pages/user-guide>

For more detailed instructions please visit the User Guide on our website